

# Pallet Truck Load Roller Replacement Guide

The load wheels of a pallet truck have an enormous load-bearing capacity. Depending on the intensity and frequency of use, they can start to wear out and will eventually need to be replaced. The following instructions give you a step-by-step guide on pallet jack load wheel replacement:

1



The right accessories

You will need a hammer, a pin punch, grease and an old cloth or rag.



2




The right position

Carefully lay the pallet truck on one side so that all parts are easily accessible and so you can adopt a working posture that is as easy on your back.



3

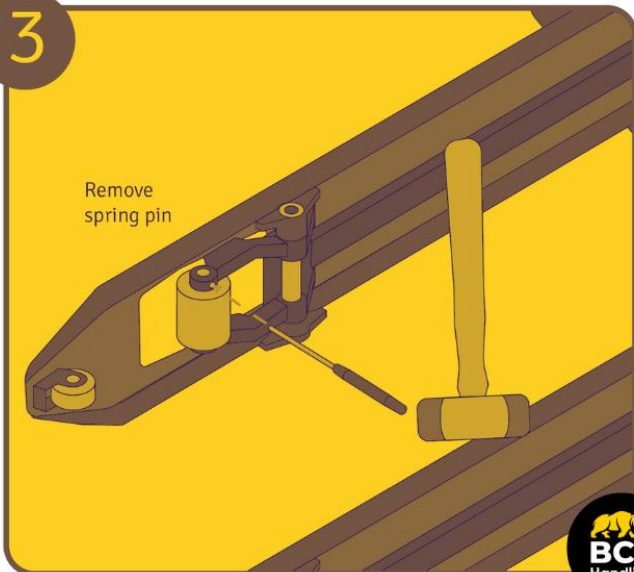


Remove the spring pin

Carefully remove the spring pin by hitting it with a hammer and a pin punch.



4

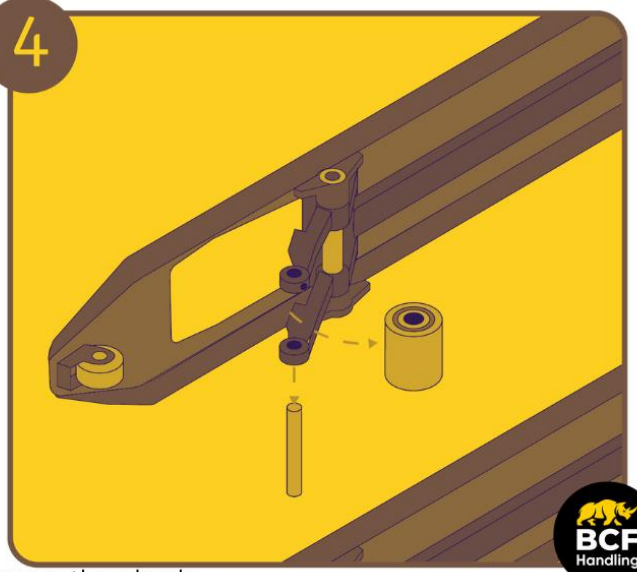

Remove the wheels

Fold the wheel holder down slightly and remove the wheel axle or shaft. Pull the wheels off the axle.



+44 (0)28 9344 0526



info@bcfhandling.com




bcfhandling.com



Visit Our Online  
Webshop Now!


www.bcfhandling.com

# Pallet Truck Load Roller Replacement Guide

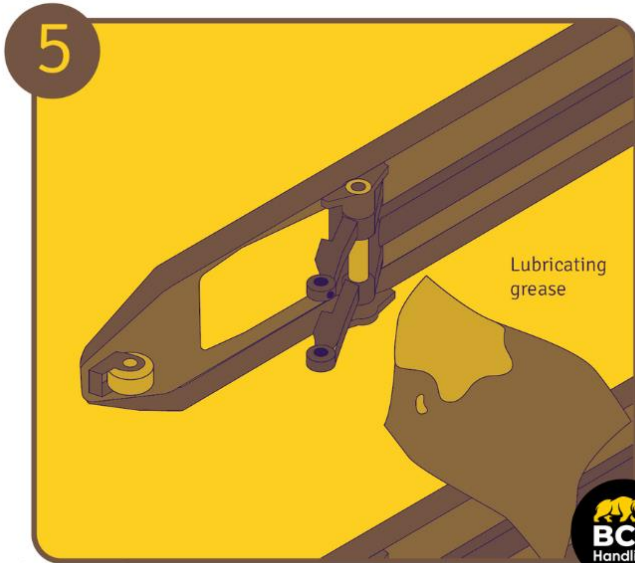 

Lubricate the parts

 Lubricate all moving parts with grease, taking care to lubricate the linkage rod in particular. If necessary, follow the instructions in the operating manual.

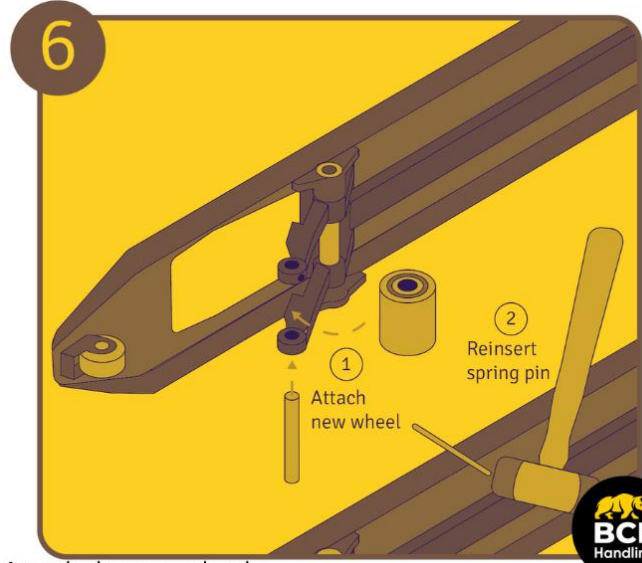

Attach the new wheels

Put the new wheels onto the axle, return it to its previous position and carefully drive the spring pin back in with the hammer to secure everything in place.



Check function

Return the pallet truck to an upright position and ensure everything is functioning correctly. The load wheels should run smoothly without dragging or affecting the flow of movement.



+44 (0)28 9344 0526

info@bcfhandling.com

bcfhandling.com



Visit Our Online  
Webshop Now!

[www.bcfhandling.com](http://www.bcfhandling.com)